

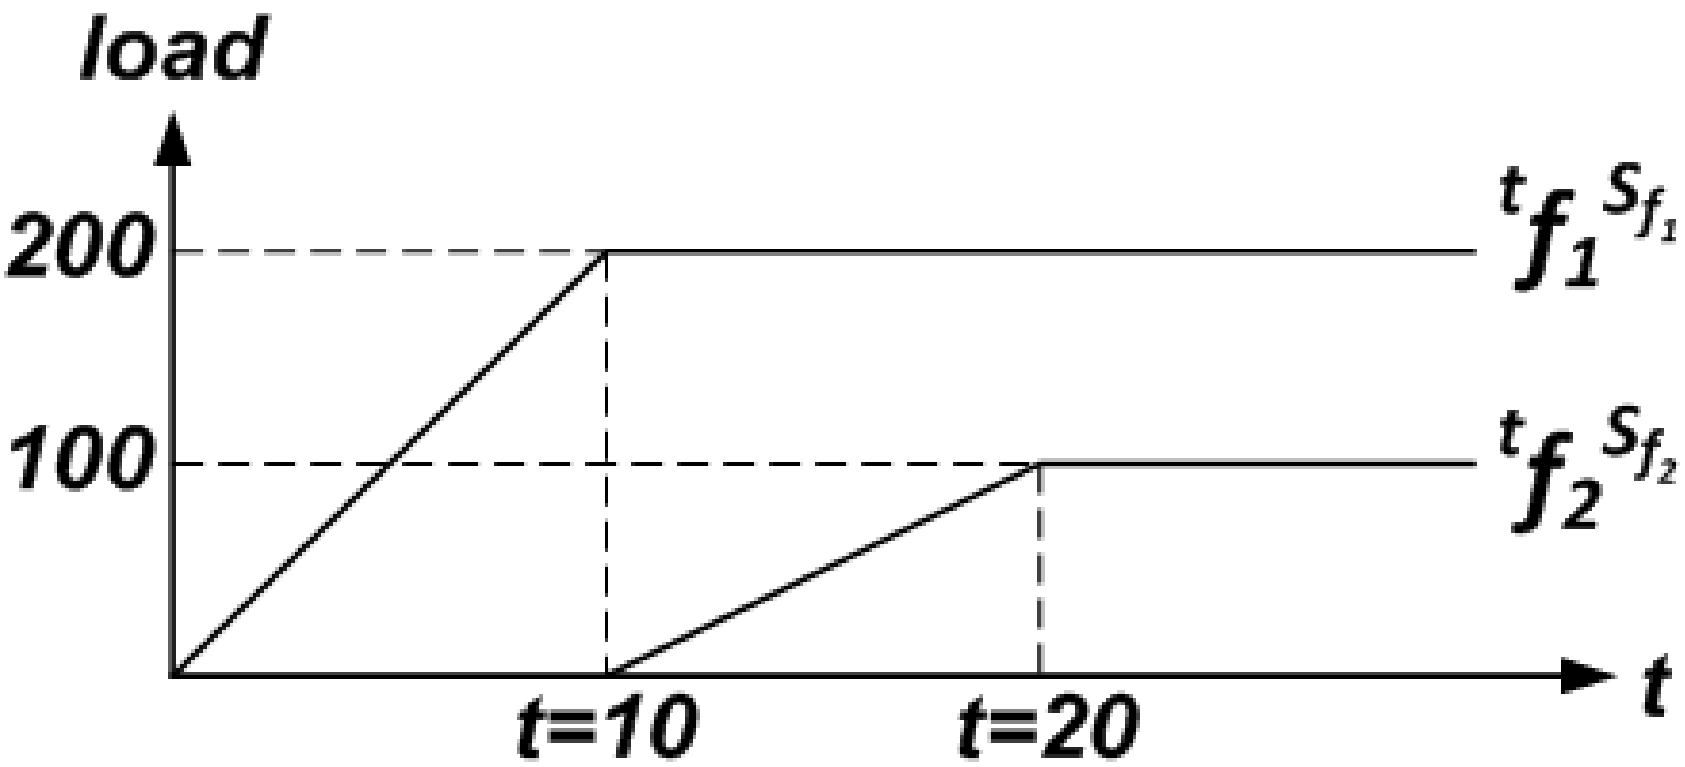


# Rubber-like Material (Mooney-Rivlin)

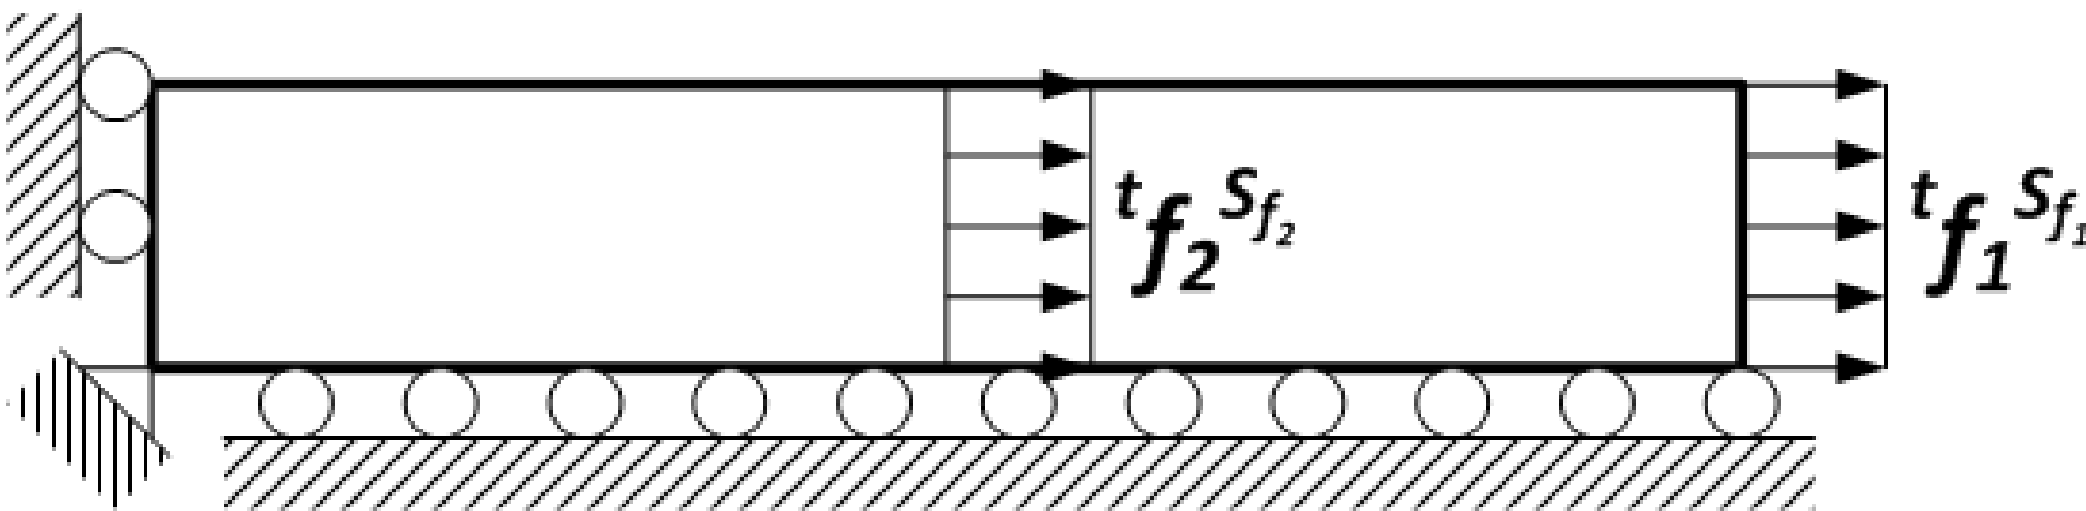


**A  
D  
I  
N  
A**

Engineering stress

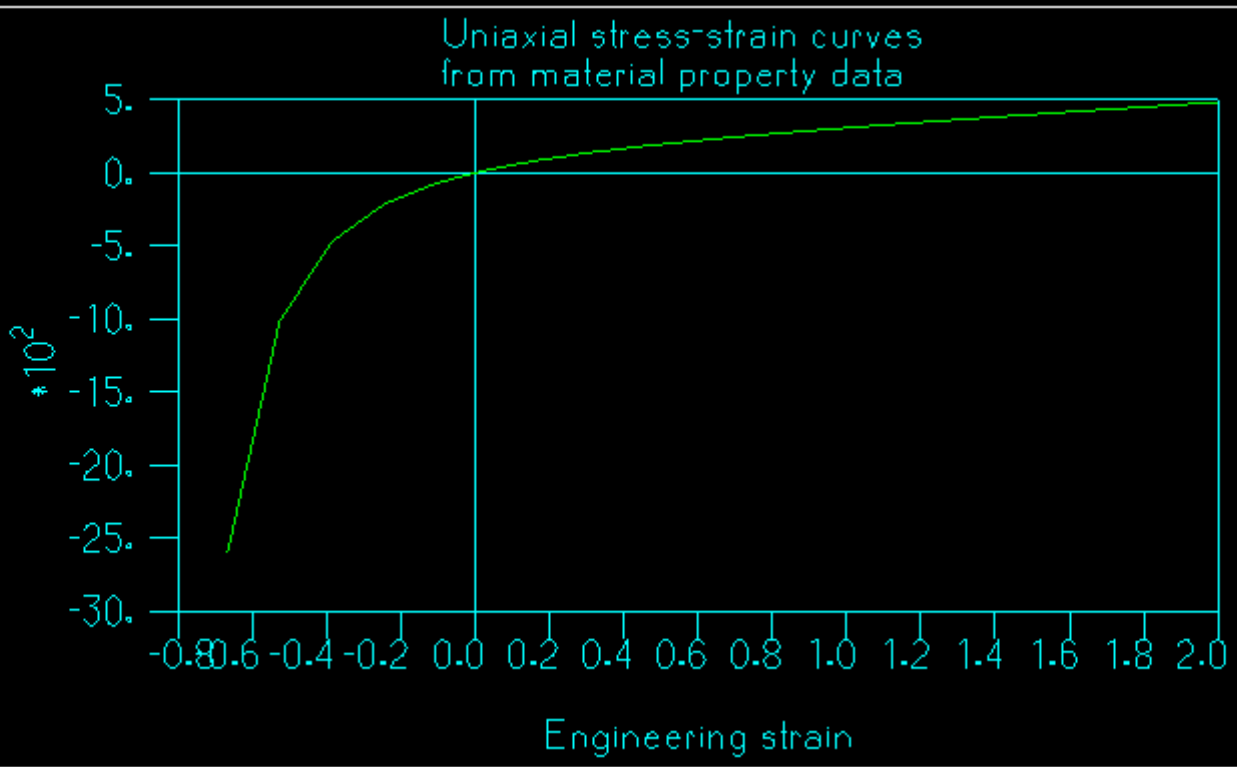

**A  
D  
I  
N  
A**

True stress

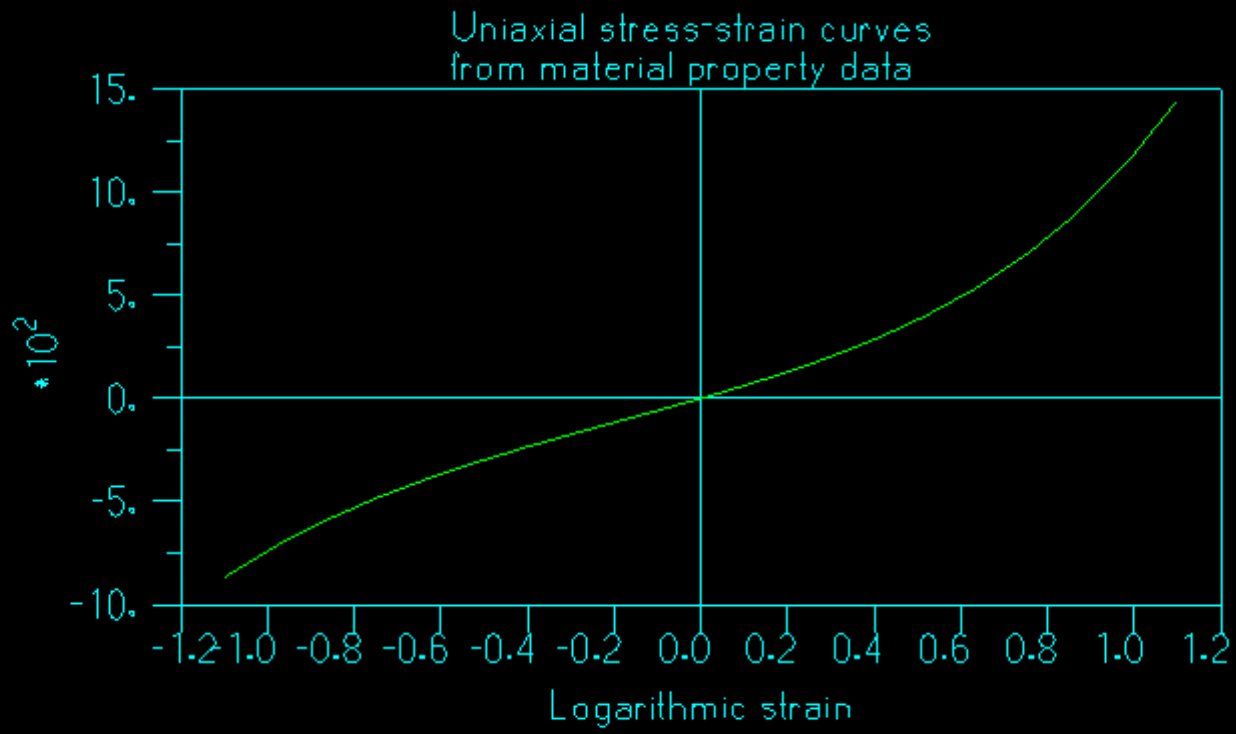

MIT OpenCourseWare  
<http://ocw.mit.edu>

2.094 Finite Element Analysis of Solids and Fluids II  
Spring 2011

For information about citing these materials or our Terms of Use, visit: <http://ocw.mit.edu/terms>.